SCOSCHE

NN1647B

IN-DASH DOUBLE DIN INSTALLATION KIT FOR 2003-05 NISSAN 350Z

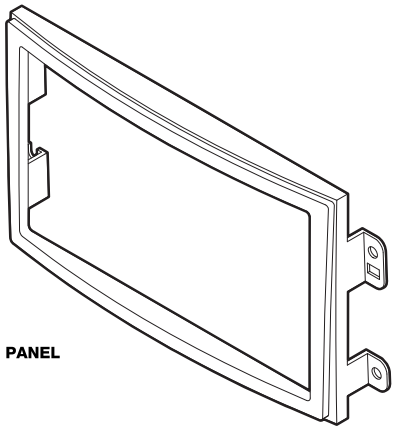

6538 PANEL

INTRODUCTION/PRELIMINARY

This premium installation kit is for 2003-05 Nissan 350Z vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

NN03B
1995-Up Nissan

NDAB
Nissan Diversity Antenna Adapter

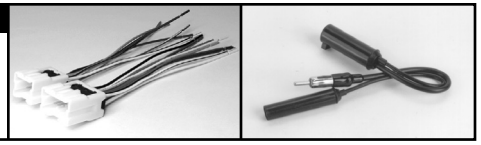

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (NN1647B) in 2003-05 Nissan 350Z vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2008 SCOSCHE INDUSTRIES, INC.

SI 4/08 NN1647B (3000003)

FACTORY STEREO REMOVAL

2003-05 NISSAN 350Z

Note: The factory stereo provision is for a Double Din stereo.

1. Using panel removal tool unsnap silver bezel around shifter.
2. Unclip shift release next to shifter.
3. Shift shifter into drive.
4. Using panel removal tool snap up bezel around shifter and A/C controls starting from rear to front. Disconnect and remove.
5. Remove (4) Phillips head screws from underneath stereo. Pull out A/C control unit, disconnect and remove.
6. Open storage compartment above radio, using panel removal tool. Snap front edge panel of storage compartment. Remove (2) Phillips head screws from behind.
7. Using panel removal tool pop out middle section of dash that contains stereo storage compartment and gauges, disconnect and remove.
8. Remove (8) Phillips head screws from side of stereo and remove.
9. Extract (4) screws that secure brackets to dash bezel and remove.

MOUNTING THE STEREO

DOUBLE DIN-ISO MOUNT

1. Screw factory brackets to aftermarket double din stereo, enough to still allow movement of brackets.
2. Place kit panel 6538 into stereo opening in the removed dash bezel.
3. Align factory brackets and aftermarket double din stereo assembly to 6538 panel and dash bezel assembly and screw into secure.
4. Fully tighten bracket screws to aftermarket double din stereo to secure stereo. Finish reassembly.

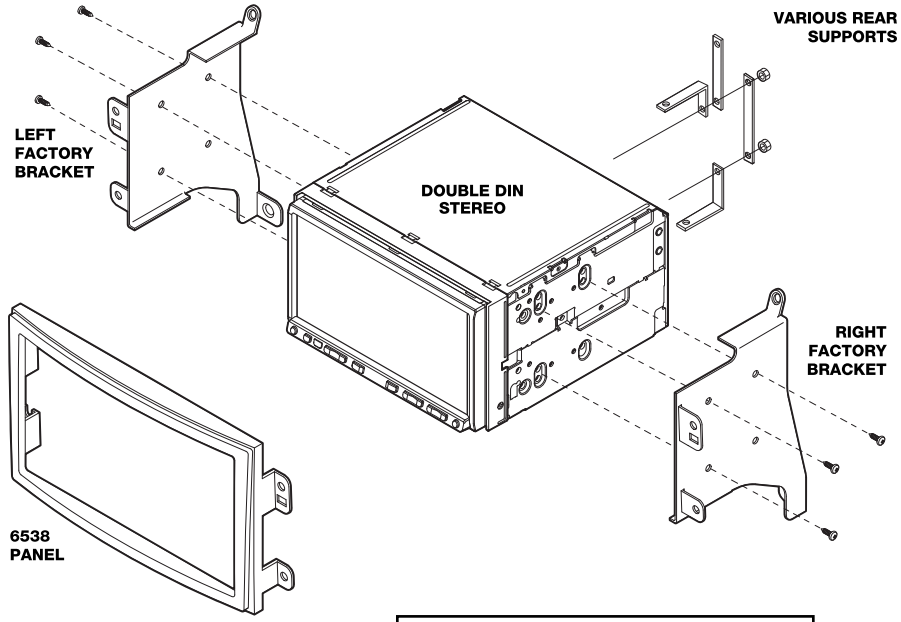

NOTE:
REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE STEREO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.